# GHOSTDRONE2.0 AERIAL

# **Quick Start Guide**

### 1. Download the EHANG Play APP



iPhone/iPad: Please search "EHANG Play" in App Store Android: Please search "EHANG Play" in Google Play

### 2. Charge the Smart Flight Battery and the G-BOX




- Power Adapter
- Smart Flight Battery
- G-BOX


The minimum battery requirement for your first flight:

- >=70%: Smart Flight Battery
- >=90%: G-BOX
- >=40%: Mobile Device

### 3. Connect your phone to GHOSTDRONE according to the instructions in the APP

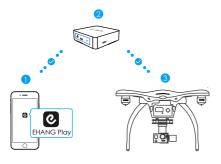

## 4. Install the propellers and follow the instructions in the APP for your first flight

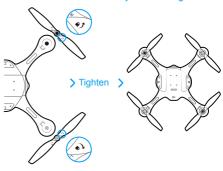

### Note




For your first flight, please take the GHOSTDRONE outdoors and follow the instructions in the APP.

For your safety, Avatar Mode will be unlocked after you have flown in Touch-to-go Mode for 3 times.

For your first flight, please follow the minimum battery requirement: Smart Flight Battery >=70%, G-BOX >= 90%, Mobile Device >= 40%.

## -- GHOSTDRONE AERIAL Checklist--

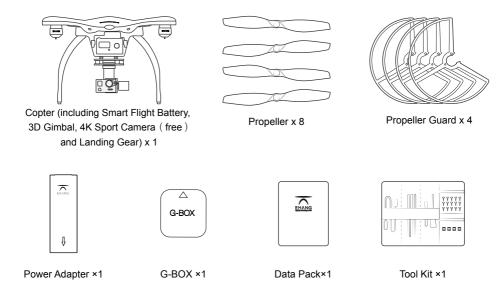

### Note:

The tool kit includes: Battery Charging Cable x 1, Micro USB cable x 1, Wrench x 1, Hex Screwdriver x 1, Socket Cap Screw x 15, Damper x 4.

The Micro USB cable can be used for charging the G-BOX, and updating the GHOSTDRONE firmware.

# **GHVNQ**

Guangzhou EHang Intelligent Technology Co., Ltd. ENTERPRISE STANDARD: Q/ EHT 001-2017

#### Contact Us

Business Hour: Monday – Friday 9:00 A.M – 5:00 P.M (PST) Customer Service Phone: +1 650-533-8554 / 888-800-7056

Customer Service Email: support@ehang.com

If there are any updates to the quick start guide in the future, please see the latest version on official website: www.ehang.com/download/

EHang, Inc. reserves all rights to interpret this manual.